March 6 2003

**component side**

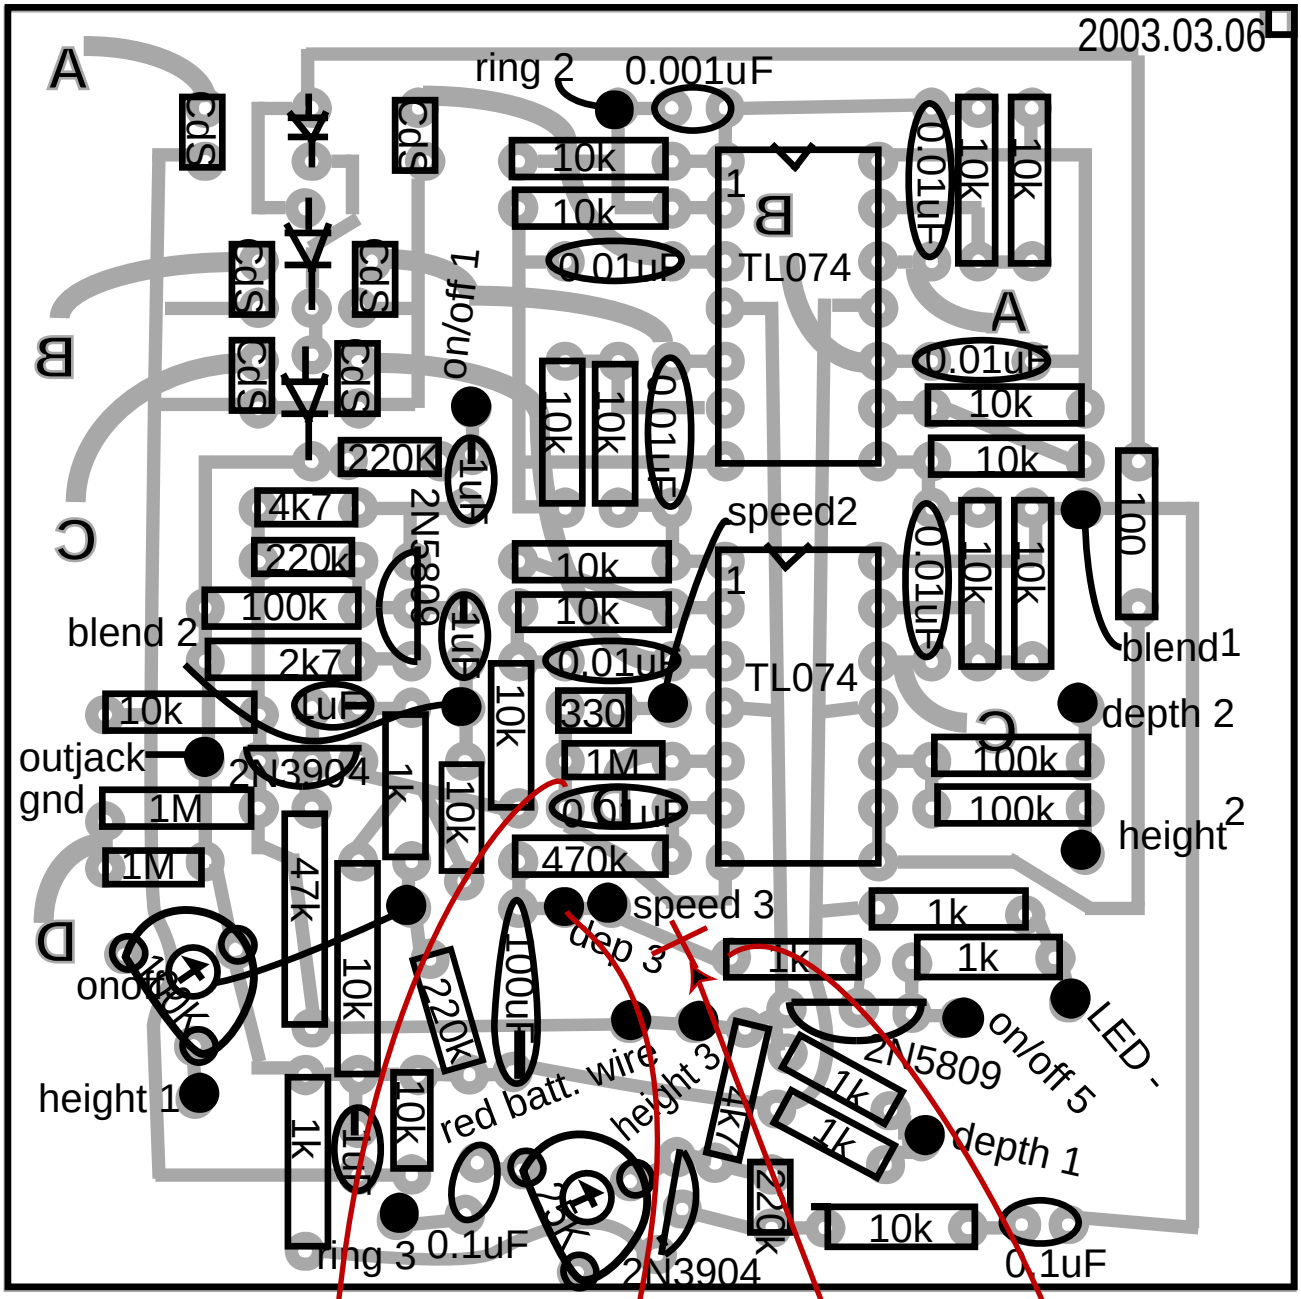

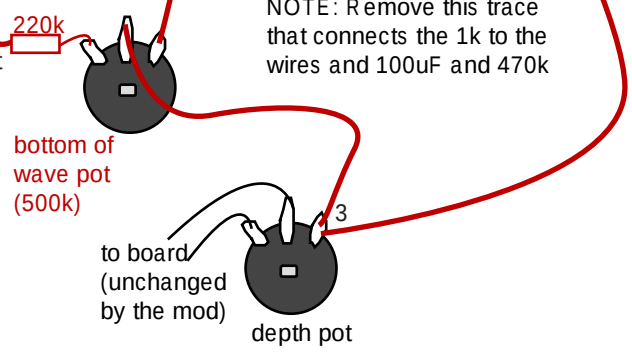
In summary:
1) Remove existing wire from "depth 3" on board to the pot
2) Snip/remove the indicated trace between the 1k and the 100uF/470k/wires
3) Solder a wire from "depth 3" on the board to Wave 3
4) Solder a wire from the indicated spot on the board through a 220k resistor to Wave 1
5) Solder a wire from Wave 2 to lug 3 on the depth pot
6) Solder a wire from lug 3 on the depth pot to the 1k resistor on the board